
 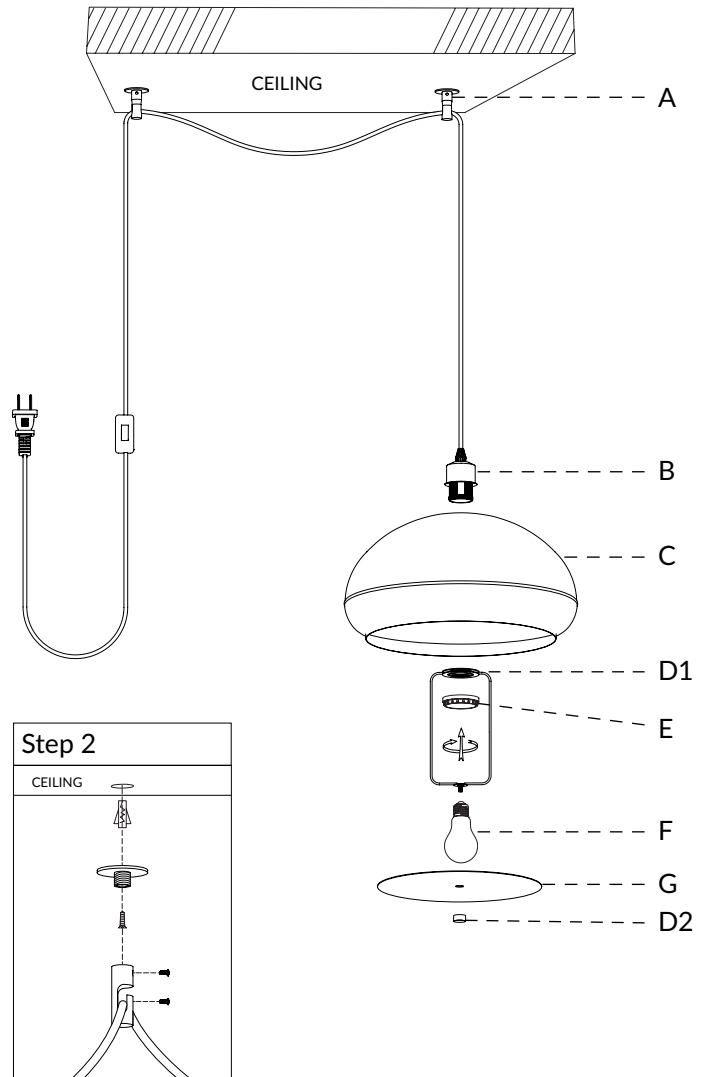

 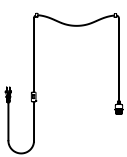
 
 



ASSEMBLY INSTRUCTIONS

Morelli Swag

- Carefully remove all parts from the carton and place them on a clean surface. Please refer to the list of included items inside the carton.
- Secure 3 pinch swag hooks (A) to ceiling and wall based on placement with the anchor screws provided.
 - To install each swag hook (A), drill a pilot hole for the anchor and then hammer in the anchor.
 - Secure the backplate into the anchor with a screw.
 - Loosen both setscrews on the hook body with the allen wrench provided.
 - Thread hook body onto backplate.
 - Tighten top setscrew to secure the hook to the backplate.
- Position the cord of the swag assembly (B) into the pinch swag hooks (A) where desired. Tighten lower set screws of the swag hooks (A) to secure cord.
- Attach shade (C) and harp (D1) to socket of the swag assembly (B) and secure with socket ring (E).
- Insert the light bulb (F) into the socket.
- Attach diffuser (G) to the bottom of the harp (D1) and secure with the finial (D2).
- Plug into a surge protected 120v outlet and enjoy the beautiful light!

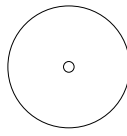

ITEMS INCLUDED / ARTÍCULOS INCLUIDOS						
A	B	C	D (1-2)	E	F	G
						
PINCH SWAG HOOK/ GANCHO DE PELLIZCO PARA CORTINAS	SWAG ASSEMBLY/ MONTAJE DE SWAG	SHADE/ PANTALLA	HARP & FINIAL/ ARPA Y REMATE	SOCKET RING/ ANILLO DE ENCHUFE	LIGHT BULB/ BOMBILLA	DIFFUSER/ DIFUSORA

IMPORTANT SAFETY INSTRUCTIONS

This lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

Esta lámpara tiene un enchufe polarizado (una de las clavijas es más ancha que la otra) como medida de seguridad para reducir el riesgo de descarga eléctrica. Este enchufe solo encaja en una toma de corriente polarizada de una sola manera. Si el enchufe no entra completamente en la toma, gírelo. Si aun así no encaja, contacte con un electricista cualificado. No lo utilice nunca con un cable de extensión a menos que el enchufe pueda insertarse completamente. No modifique el enchufe.