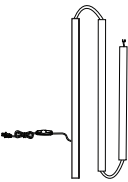




ASSEMBLY INSTRUCTIONS

LODI TORCHIERE


1510500MB

1. Carefully remove all lamp parts from the box and spread on a flat clean surface.
Please see list of items included in box.
2. Insert tube (B) into the base assembly (A) and tighten to the base until secure.
3. Attach tubes (C) to (B), then (D) to (C), as these will comprise the body of your torchiere. Each tube has one end threaded on the outside and the opposite end tapped on the inside. Connect each tube with the outside thread facing up.
4. Install the shade (E) onto tube (D) by screwing it on. It will rest centered on top.
5. Screw the light bulb into the socket assembly (Recommended: E26, A19, 23W LED, 2700K, 90+CRI, FLICKER-FREE, DIMMABLE)
6. Plug into a 110V outlet.
7. Enjoy the beautiful light.

ITEMS INCLUDED / ARTICULOS INCLUIDOS		
B+C+D  TUBE TUBO	A  BASE BASE	E  SHADE PANTALLA

IMPORTANT SAFETY INSTRUCTIONS

This lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

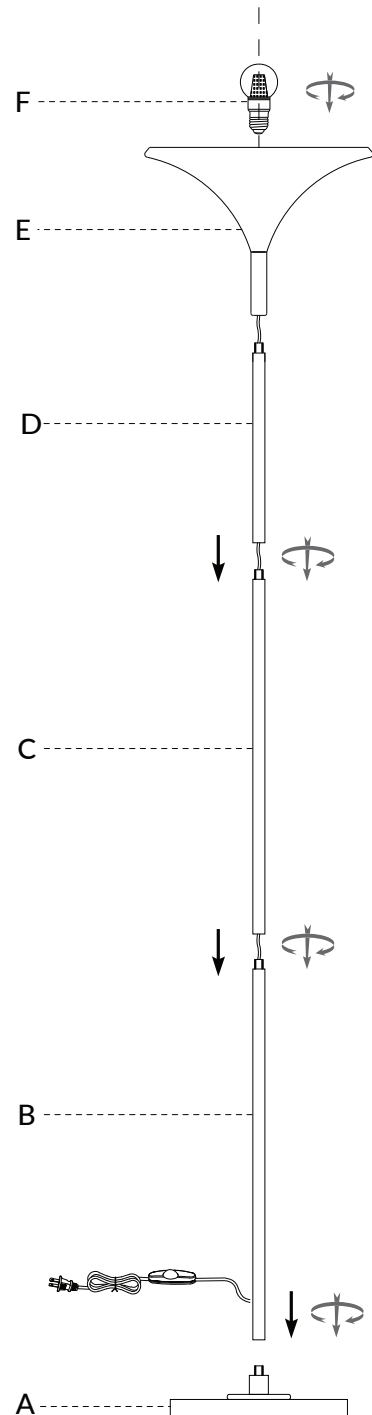

For a step by step assembly video, please go to www.novaofcalifornia.com

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Esta lampara tiene un enchufe polarizado (una navaja es mas ancha que la otra) como forma de seguridad para reducir el riesgo de un shock electrico. Este enchufe polarizado entrara en una conexión solo de un lado. Si el enchufe no entra en la conexión trate al reverso. Si aun así no entra, contacte a un electricista calificado. Nunca use una extension a menos que el enchufe pueda ser conectado completamente. No altere el enchufe.